


User manual for your Classique

28L Built-in Microwave Oven

CLM28GK

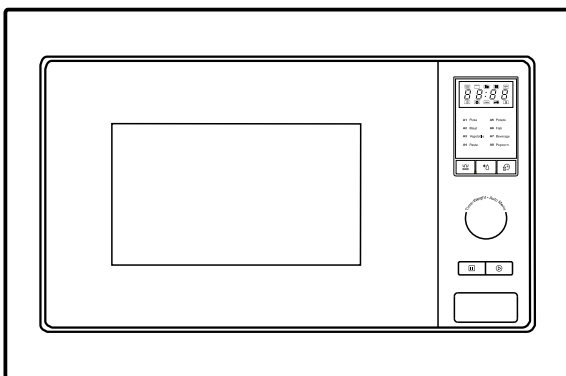

NOTE: This user manual contains important information including safety & installation points which will enable you to get the most out of your Classique appliance. Please keep it in a safe place so that it is readily available for future reference.

CONTENTS

PRECAUTIONS.....	2-7
CLEANING.....	8
MATERIALS YOU CAN USE IN MICROWAVE OVEN	9
SETTING UP YOUR OVEN.....	10
INSTALLATION AND CONNECTION	11
INSTALLATION INSTRUCTIONS.....	12-14
OPERATION INSTRUCTION.....	14-19
TROUBLESHOOTING.....	20

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

(a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.

(b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

(c) WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

Specifications

Model:	CLM28GK
Rated Voltage:	230-240V~ 50Hz
Rated Input Power (Microwave):	1450 W
Rated Output Power (Microwave):	900 W
Rated Input Power (Grill):	1100 W
Oven Capacity:	28L
Turntable Diameter:	Ø 315 mm
External Dimensions:	595X400X388 mm
Net Weight:	Approx. 18.5 kg

Note: you can find the data plate on the front side of the microwave oven cavity.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions including the following:

1. Warning: Liquids and other foods must not be heated in sealed containers since they are liable to explode.
2. Warning: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
3. This appliance should only be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be conducted by children unless they are older than 8 and are supervised.
4. Keep the appliance and its cord out of reach of children less than 8 years.
5. Only use utensils that are suitable for use in the microwave oven.
6. The oven should be cleaned regularly and any food deposits should be removed.
7. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" on page 2.
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

9. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
10. Do not overcook food.
11. Do not use the oven cavity for storage purposes. Do not store items such as bread, cookies, etc. inside the microwave oven.
12. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
13. Install or locate this oven only in accordance with the installation instructions provided.
14. Eggs in the shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
15. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - farm houses;
 - bed and breakfast type environments.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Do not store or use this appliance outdoors.
18. Do not use this oven near water, in a wet basement or near a swimming pool.
19. The temperature of accessible surfaces may be high when the appliance is operating. The surfaces are liable to get hot during use. Keep cord away from heated surfaces, and do not cover any vents on the oven.

- 20. Do not let cord hang over edge of a table or counter.
- 21. Failure to maintain the microwave oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- 22. The contents of feeding bottles and baby food jars should be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- 23. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- 24. Children should be supervised to ensure that they do not play with the appliance.
- 25. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- 26. Accessible parts may become hot during use. Young children should be kept away.
- 27. A steam cleaner is not to be used.
- 28. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- 29. Only use the temperature probe recommended for this oven (for ovens provided with a facility to use a temperature-sensing probe).
- 30. The microwave oven must be operated with the decorative door open (for ovens with a decorative door).
- 31. The surface of the storage cabinet can get hot.

- 32. The microwave oven is intended for heating food and beverages.
- 33. You must NOT remove the wave guide cover.
- 34. You must remove any protective film/labels and wash the accessories before first use.
- 35. The interior light bulb can only be replaced by a technician.
- 36. Failure to clean the interior regularly could result in irreversible damage to the interior surfaces that may not be covered by warranty.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

To Reduce the Risk of Injury to Persons Grounding Installation

DANGER

Electric Shock Hazard:
Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard:
Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short-circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
 - 1)The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2)The extension cord must be a grounding-type 3-wire cord.
 - 3)The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the microwave oven after use with a slightly wet cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.
6. The exterior of the microwave oven can only be cleaned with mild detergent and warm water.

UTENSILS CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

Utensils	Remarks
Aluminium foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from microwave oven walls.
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with a metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for short-term cooking only.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labelled "Microwave Safe". Some plastic containers soften as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Grease-proof paper	Use as a cover to prevent splattering, retain moisture or as a wrap for steaming.

Materials to be avoided in microwave oven

Utensils	Remarks
Aluminium tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the microwave oven.
Paper bags	May cause a fire in the microwave oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.


SETTING UP YOUR MICROWAVE OVEN

Names of Oven Parts and Accessories


Remove the oven and all materials from the carton and oven cavity.

Your microwave oven comes with the following accessories:

Glass tray	1	Screw A	2
Turntable ring assembly	1	Screw B	1
Instruction Manual	1	Bracket	1

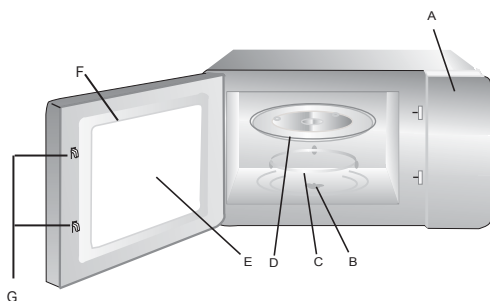


- A) Control panel
- B) Turntable shaft
- C) Turntable ring assembly
- D) Glass tray
- E) Observation window
- F) Door assembly
- G) Safety interlock system

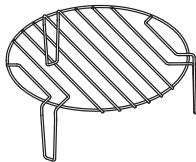

Grill Rack (Only to be used in grill function and be placed on the glass tray)

Turntable Installation

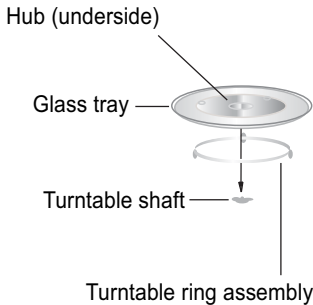

- a. Never place the glass tray upside down. The glass tray should never be restricted.
- b. Both glass tray and turntable ring assembly must always be used during cooking.
- c. All food and containers of food must always be placed on the glass tray for cooking.
- d. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service centre.

Installation and connection

1. This appliance is only intended for domestic use.
2. This oven is intended for built-in use only. It is not intended for counter-top use or for use inside a cupboard.
3. Please observe the special installation instructions.
4. The appliance can be installed in a 60cm wide wall-mounted cupboard (at least 50cm deep and 85cm off the floor).
5. The appliance is fitted with a plug and must only be connected to a properly installed earthed socket.
6. The mains voltage must correspond to the voltage specified on the rating plate.
7. The socket must be installed and connecting cable must only be replaced by a qualified electrician. If the plug is no longer accessible following installation, an all-pole disconnecting device must be present on the installation side with a contact gap of at least 3mm.
8. Adapters, multi-way strips and extension leads must not be used. Overloading can result in a risk of fire.

The accessible surface may be hot during operation.



Installation Instructions

Please Read the Manual Carefully Before Installation

Please note

ELECTRICAL CONNECTION



The oven is fitted with a plug and must only be connected to a properly installed earthed socket. The socket must only be installed and the connecting cable must only be replaced by a qualified electrician in accordance with the appropriate regulations. If the plug is no longer accessible following installation, an all-pole isolating switch must be present on the installation side with a contact gap of at least 3mm. The fitted cabinet must not have a back wall behind the appliance. Minimum installation height: 85 cm

Note: Do not trap or bend the power cable.

Do not cover the ventilation slots and suction holes.

A. Built-in furniture

Packing list

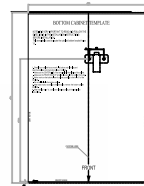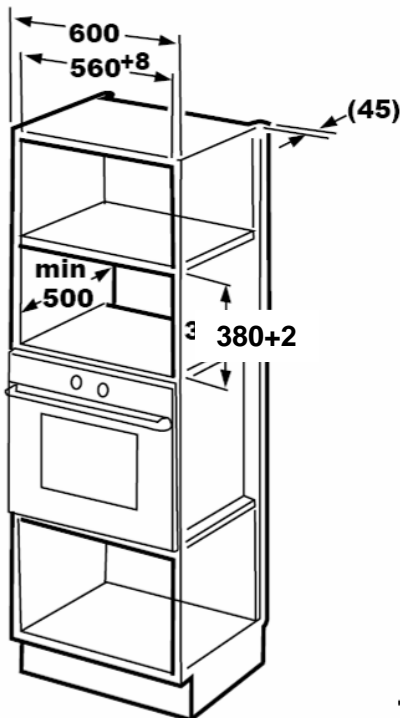


Screw A



Bracket




Screw B

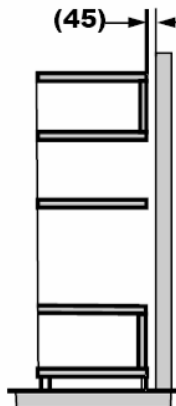


B. Prepare the cabinet


1. Read the instruction on the BOTTOM CABINET TEMPLATE, put the template on the bottom plane of cabinet.

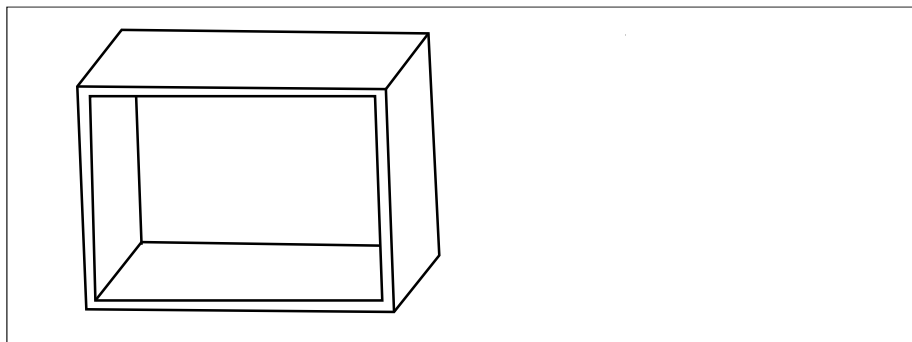

2. Make the marks on the bottom plane of cabinet according to marks "a" of the template

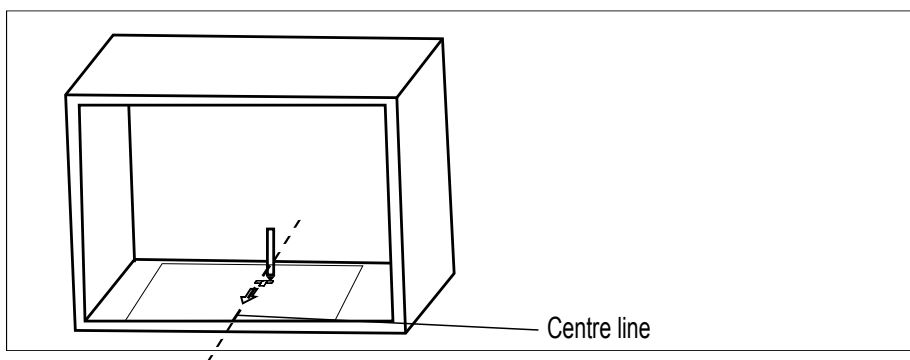


3. Remove the bottom cabinet template and fix the bracket with screw A.

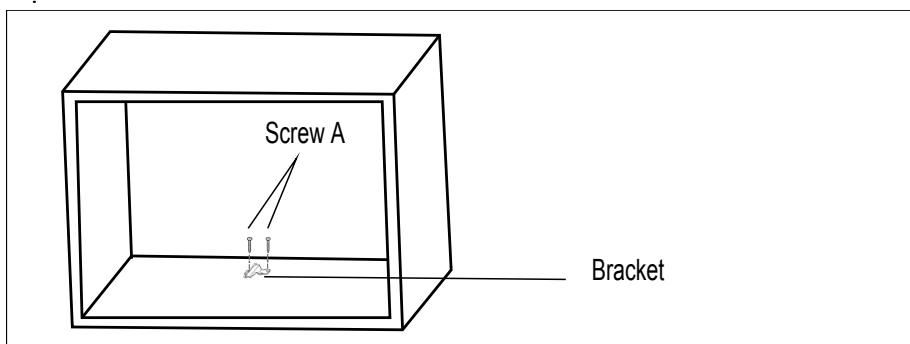


C. Install the microwave oven

4. Install the oven to the cabinet

- Make sure the back of the microwave oven is locked by bracket.
- Do not trap or kink the power cord.

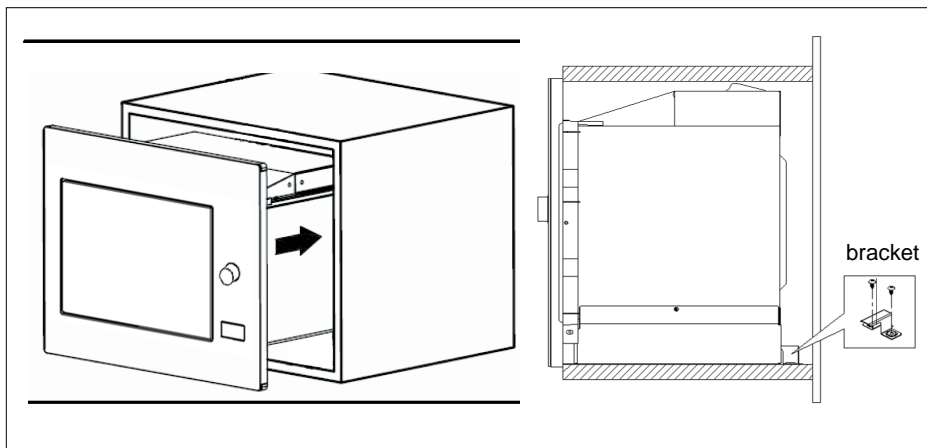

5. Open the door and fix the microwave oven to the cabinet with Screw B at the installation hole.

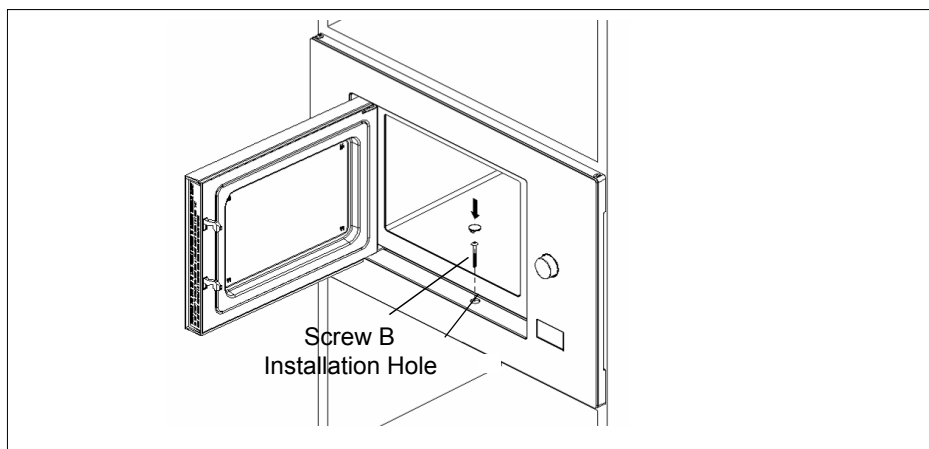

OPERATION INSTRUCTION






This microwave oven uses modern electronic control to adjust cooking parameters to meet your needs for better cooking.

Before first use

You should use a mild liquid detergent and a damp cloth on the internal area of the microwave oven before it is used for the first time. This will help to remove any residue from the manufacturing process. Also be sure to carefully inspect the appliance to remove any packaging material from the interior and exterior before use.

1.Clock Setting







When the microwave oven is electrified, the oven will display "0:00", buzzer will ring once.

- 1) Press " " twice, the hour figures will flash;
- 2) Turn " " to adjust the hour figures, the input time should be within 0--23.
- 3) Press " ", the minute figures will flash.
- 4) Turn " " to adjust the minute figures, the input time should be within 0--59.
- 5) Press " " to finish clock setting. ":" will flash.

Note: 1) The clock function will not work if the clock is not set.

- 2) During the process of clock setting, if no operation in 1 minute, the microwave oven will go back to the previous status automatically.

2. Microwave Cooking

- 1) Press the " " key once, and "P100" displays.
- 2) Press " " for times or turn " " to select the microwave power "P100", "P80", "P50", "P30", "P10" will display in order.
- 3) Press " " to confirm.
- 4) Turn " " to adjust the cooking time. (The time setting should be 0:05- 95:00.)
- 5) Press " " to start cooking.







Microwave Power Chart


Microwave Power	100%	80%	50%	30%	10%
Display	P100	P80	P50	P30	P10

Note: the step quantities for the adjustment time of the coding switch are as follows:







- 0---1 min : 5 seconds
- 1---5 min : 10 seconds
- 5---10 min : 30 seconds
- 10---30 min : 1 minute
- 30---95 min : 5 minutes

3.Grill Cooking






- 1) Press the " " key once, and "P100" displays.
- 2) Press " " for times or turn " " to select grill function. "G" displays.
- 3) Press " " to confirm .
- 4) Turn " " to adjust the grill time. (The time setting should be 0:05- 95:00.)
- 5) Press " " to start cooking.

Note: If half the grill time passes, the microwave oven sounds twice. This is normal. In order to have a better effect of grilling food, you should open the door, turn the food over, close the door and then press "  " to continue cooking. If you do not do the above then the cycle will continue regardless.




4. Combination Cooking

- 1) Press the "  " key once, and "P100" displays.
- 2) Press "  " for times or turn "  " to select the combination power.
"C-1(55%microwave+45%grill)" and "C-2(36%microwave+64%grill)" will display in order.
- 3) Press "  " to confirm.
- 4) Turn "  " to adjust the cooking time. (The time setting should be 0:05- 95:00.)
- 5) Press "  " to start cooking.

5. Speedy Cooking




- 1) In waiting state, press "  " key to cook with 100% power level for 30 seconds.
Each press on the same key can increase 30 seconds. The maximum cooking time is 95 minutes.
 - 2) During the microwave, grill and combination cooking and time defrost process, press "  " to increase the cooking time.
 - 3) In waiting state, turn "  " left to choose the cooking time directly. After choosing the time, press "  " to start cooking. The microwave power is 100%.
- Note: Under the states of auto menu and weight defrost, cooking time cannot be increased by pressing "  " "

6. Defrost By Weight

- 1) Press " * " once, the screen will display "dEF1".
- 2) Turn "  " to select the food weight. The range of weight is 100-2000g.
- 3) Press "  " key to start defrosting.

7. Defrost By Time

This function activates the buzzer without stopping cooking

- 1) Press " * " twice, the screen will display "dEF2".
- 2) Turn "  " to select the cooking time.
- 3) Press "  " key to start defrosting.








Note: The default power level is P30, and it cannot be changed.

8. Multi-Stage Cooking

Two stages can be maximumly set. If one stage is defrosting, it should be put in the first stage. The buzzer will ring once after each stage and the next stage will begin.




Note: Auto menu cannot be set as one of the stages.

Example: if you want to defrost the food for 5 minutes and then cook with 80% microwave power for 7 minutes, the steps are as follows:

- 1) Press "  " twice, the screen will display "dEF2".
- 2) Turn "  " to adjust the defrost time of 5 minutes;
- 3) Press "  " once;
- 4) Turn "  " to choose 80% microwave power till "P80" displays;
- 5) Press "  " to confirm;
- 6) Turn "  " to adjust the cooking time of 7 minutes;
- 7) Press "  " to start cooking.





9. Kitchen Timer

Note: The Kitchen time is different from 24-hour system. Kitchen Timer is a timer.

- (1) Press "  " once, LED will display 00:00.
- (2) Turn "  " to enter the correct timer (the maximum cooking time is 95 minutes.)
- (3) Press "  " to confirm setting.
- (4) When the kitchen time is reached, the clock indicator will go out. The buzzer will ring 5 times.

If the clock has been set (24-hour system), LED will display the current time.




10. Auto Menu

- 1) In waiting state, turn "  " right to choose the menu from "A-1" to "A-8";
- 2) Press "  " to confirm the menu you choose;
- 3) Turn "  " to choose the food weight;
- 4) Press "  " to start cooking;
- 5) After cooking finishes, the buzzer sounds five times.



The menu chart:

Menu	Weight	Display
A-1 Pizza	200 g	200
	400 g	400
A-2 Meat	250 g	250
	350 g	350
	450 g	450
A-3 Vegetable	200 g	200
	300 g	300
	400 g	400
A-4 Pasta	50g(with 450 ml cold water)	50
	100g(with 800 ml cold water)	100
A-5 Potato	200 g	200
	400 g	400
	600 g	600
A-6 Fish	250 g	250
	350 g	350
	450 g	450
A-7 Beverage	1 cup(120 ml)	1
	2 cups(240 ml)	2
	3 cups(360 ml)	3
A-8 Popcorn	50 g	50
	85 g	85
	100 g	100

11. Lock-out Function for Children

Lock: In waiting state, press "  " for 3 seconds, there will be a long "beep" denoting entering the child-lock state and the "child-lock" indicator will light. LED will display the current time if the clock has been set. Otherwise, the screen will display "  ".
Lock quitting: In locked state, press "  " for 3 seconds, there will be a long "beep" denoting that the lock is released.

12. Inquiring Function

- 1) In cooking states of microwave, grill and combination, press "  ", the current power will be displayed for 3 seconds.
- 2) During cooking state, press "  " to check the current time. It will be displayed for 3 seconds.

Troubleshooting

Normal	
Microwave oven interfering with TV reception	Radio and TV reception may be interfered when microwave oven is operating. It is similar to the interference of small electrical appliances, like a mixer, vacuum cleaner or electric fan. This is normal
Dim oven light	During low power microwave cooking, oven light may become dim. This is normal
Steam accumulating on door, hot air out of vents	During cooking, steam may come out of food. Most will escape from vents, but some may accumulate on a cool place like the oven door. This is normal
Microwave oven started accidentally with no food inside	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Microwave oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blown or circuit breaker tripped	Replace fuse or reset circuit breaker
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to "Maintenance of Microwave" to clean dirty parts.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

Congratulations on your new appliance purchase!
To help care for your investment, be sure to register your appliance online. Registration will help you if you need to arrange service in the future, and serves as a record of your purchase – including critical information like model number and serial number – that you can refer to at any time. Simply visit the below website, or ask your retailer for help:

www.classique.co.nz/register

WARRANTY:

These products are covered by a warranty for a period of 24 months from the date of purchase, subject to the following conditions*. The warranty covers rectification free of charge of any fault arising from defective materials or components, or faulty workmanship or assembly.

* The conditions above mentioned are:

1. That the purchaser carefully follows all instructions packed with the product;
2. That the purchaser and/or installer carefully follows the installation instructions provided and complies with electrical wiring regulations, gas and/or plumbing codes;
3. That the purchaser carefully follows instructions provided in the owner's handbook relating to the proper use and care of the product and does not use the product for any purpose other than the domestic use for which it has been designed;
4. Commercial use of the product for professional or industrial purposes will void this warranty.;
5. That the product was purchased and installed in New Zealand;
6. That this warranty does not extend to:
 - a) optional glass lids for hobs apart from claims which relate to mechanical or physical damage thereof at the date of purchase;
 - b) 'consumable' parts such as light bulbs or filters;
 - c) damage to ceramic glass caused by liquid or solid spill-overs, lack of maintenance, or impact;
 - d) damage to surface coatings caused by cleaning or maintenance using products not recommended by the owner's handbook;
 - e) defects caused by normal wear and tear, accident, negligence, alteration, misuse or incorrect installations;

- f) a product dismantled, repaired or serviced by any serviceman other than an authorised service agent;
- g) a product not in possession of the original purchaser;
- h) damage caused by power outages or surges
- i) damage caused by pests (eg. rats, cockroaches etc.)

7. That if the product is a freestanding microwave oven or small appliance it must be returned to the dealer/retailer for servicing. These products, unless stated otherwise, have a 12 month warranty from original date of purchase with 24 months on the microwave magnetron; Waste disposers have a 12 month warranty.

8. The provision of service under this warranty is limited by a 25km boundary from the retailer where the product was purchased except for microwaves. Such travelling outside of these limits will incur commercial cost to be paid by you, regulated by the number of kilometres travelled beyond the 25km limit (50km return trip). Microwaves are to be delivered to the nearest authorised service agent by the customer.

Please refer to your user manual for any further conditions that may apply to your specific model.

Nothing herein contained shall be construed in any way as excluding or limiting your rights under the Consumer Guarantees Acts 1993.

For Service please visit www.classique.co.nz/service or contact the dealer/retailer from whom you purchased the product from or call the 0800 number listed below. If you are unable to establish the date of purchase, or the fault is not covered by this warranty, or if the product is found to be in working order, you will be required to bear all service call charges.

Registration of this warranty constitutes acceptance of the terms and conditions of this warranty.

Should you require any assistance, please call Customer Services on 0800 610 457.

Distributed by Applico Ltd.
www.classique.co.nz

September 2015

After registering your appliance online, we recommend you fill out the below information for your reference and keep this warranty card in a safe place.

PRODUCT:

RETAILER:

DATE OF PURCHASE:

INVOICE NO:

MODEL NO:

SERIAL NO*:

REGISTRATION WEBSITE DETAILS FOR
www.classique.co.nz/register

WEBSITE USERNAME:

WEBSITE PASSWORD:

*Please consult your user manual for guidance on finding the serial number.



Imported by Applico Ltd.

Private Bag 92900
Onehunga, Auckland 1061,
New Zealand

Website

www.classique.co.nz

Phone

0800 M10 HLP
or
0800 610 457