


User Manual for your Classique 600mm Ceramic Cooktop

CLS64K

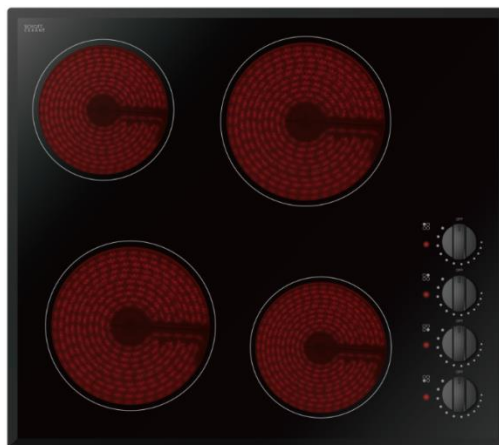


NOTE: This user manual contains important information including safety & installation points which will enable you to get the most out of your Classique appliance. Please keep it in a safe place so that it is readily available for future reference.

Contents

Environmental note	1
Important safety information	2
Specifications	5
Product and aperture dimensions	5
Product specifications	5
Standard accessories	6
Electrical details	6
Ceramic hob surface layout	6
Control panel	7
Using the ceramic hob	7
Before first use	7
Control knobs	8
Switching on a cooking zone and setting a power level	8
Residual heat indicators	9
Hob guidelines	9
Cleaning and maintenance	10
Cleaning the ceramic hob top	10
After each use	11
Cleaning table	11
Using a ceramic hob scraper	11
Using a specialist ceramic hob cleaner	12
Installation	12
Positioning	12
Unpacking the appliance	13
Installing the appliance	13
Electrical connection	15
Connecting the mains supply cable	16
Replacing the mains supply cable	18
My appliance isn't working correctly	18
Warranty card	20

Environmental note

This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



- o The packaging materials that we use are environmentally friendly and can be recycled.
- o Please discard all packaging material with due regard for the environment.

Important safety information



Your safety is of the utmost importance to us. Please make sure that you read this instruction booklet **before** attempting to install or use the appliance. If you are unsure of any of the information contained in this booklet, please contact the Retailer where you purchased your unit from.

General information

- o This appliance is designed for domestic household use and for the cooking and frying of domestic foodstuffs.
- o **IMPORTANT:** The adjacent furniture and all materials used in the installation **must** be able to withstand a minimum temperature of 85°C above the room's ambient temperature that it is located in, whilst in use.
- o Certain types of vinyl or laminate kitchen furniture are particularly prone to heat damage or discolouration at temperatures below the guidelines given above.
- o Any damage caused by the appliance being installed in contravention of this temperature limit, **will be the liability of the owner.**
- o Your new appliance is guaranteed against electrical or mechanical defects, subject to certain exclusions that are noted in the Conditions of Guarantee. The foregoing does not affect your statutory rights.
- o The use of this appliance for any other purpose or in any other environment without the express agreement of the manufacturer will invalidate any warranty or liability claim.
- o You should not use this appliance to store items on or as a work surface.
- o No modifications to the appliance are permitted by the manufacturer.
- o You should not store or place flammable or highly flammable liquids/materials on top of or near the appliance. Items made from aluminium, plastic or plastic film should also be kept away from the appliance, as they may fuse to the surface.

- o ***Repairs may only be carried out by an Authorised Service Agent. Go to www.applico.co.nz or phone 0800 M10 HLP / 0800 610 457 to locate a Service Agent nearest to you.***

Child Safety

- o We strongly recommend that babies and young children are prevented from being near the appliance and not allowed to touch the appliance **at any time**. During and after use, all surfaces will become hot.
- o If it is necessary for younger family members to be in the kitchen, please ensure that they are kept under close supervision at all times.
- o Older children should only be allowed to utilise the appliance when supervised.

General Safety

- o The appliance should only be installed and connected by a suitably qualified person.
- o The appliance should only be repaired by a qualified technician in accordance with the current regulations.
- o Care should be taken to ensure that the units and work surfaces that you build the appliance into, meet with the relevant standards.
- o If you notice any scratches, splits or cracks in the ceramic glass, you should immediately switch off the appliance and disconnect it from your mains supply. Otherwise there is the risk of electric shock occurring.

During use

- o Any film or stickers that are present on the hob surface when it is delivered should be removed before use.
- o Care should be used when utilizing the appliance, otherwise there is a risk of burns.
- o You should not allow the electrical connection cables to come into contact with the hob surface or any cookware when it is hot.
- o If fat and oil overheats, then it can ignite extremely quickly. For this reason, when cooking with fat and oil the appliance should not be left unattended.

- o Make sure that all of the cooking zones are switched off after use.

Cleaning

- o Cleaning of the hob should be carried out on a regular basis.
- o ***IMPORTANT:*** *Before attempting to clean the appliance, it should be disconnected from the mains and cool.*
- o Great care should be taken whilst using this appliance and when following the cleaning procedure.
- o You should not use a steam jet or any other high pressure cleaning equipment to clean the appliance.

Installation



This appliance must be correctly installed by a suitably qualified person, strictly in accordance with the manufacturer's instructions. Please see the specific section of this booklet that refers to installation.

- o ***We decline any responsibility for injury or damage, to person or property, as a result of improper use or installation of this appliance.***

Declaration of conformity

This appliance complies with the following European Directives:

- 73/23/EEC dated 19/02/1973 Low Voltage Directive.
- 89/336/EEC dated 03/05/1989 EMC Directive inclusive of Amending Directive 92/31/EEC.
- 93/68/EEC dated 22/07/1993 CE Marking Directive.
- 89/109/EEC dated 25/01/1992 Materials that can touch food.


- o The manufacturer declares that the hob is built using certified materials and requires the appliance to be installed in accordance with the standards currently in force. This appliance must be used by a trained person for domestic purposes only.

To avoid damaging your appliance

- o The ceramic glass can be damaged by objects falling onto it.
- o The ceramic glass edge can be damaged by knocks from cookware.

- o Cast iron and cast aluminium cookware with damaged bases may scratch the ceramic surface if they are dragged across it.
- o Pans should be lifted on and off the hob surface and not dragged.
- o Cooking zones should not be switched on without cookware placed on it. Also the cookware should not be empty.

Specifications

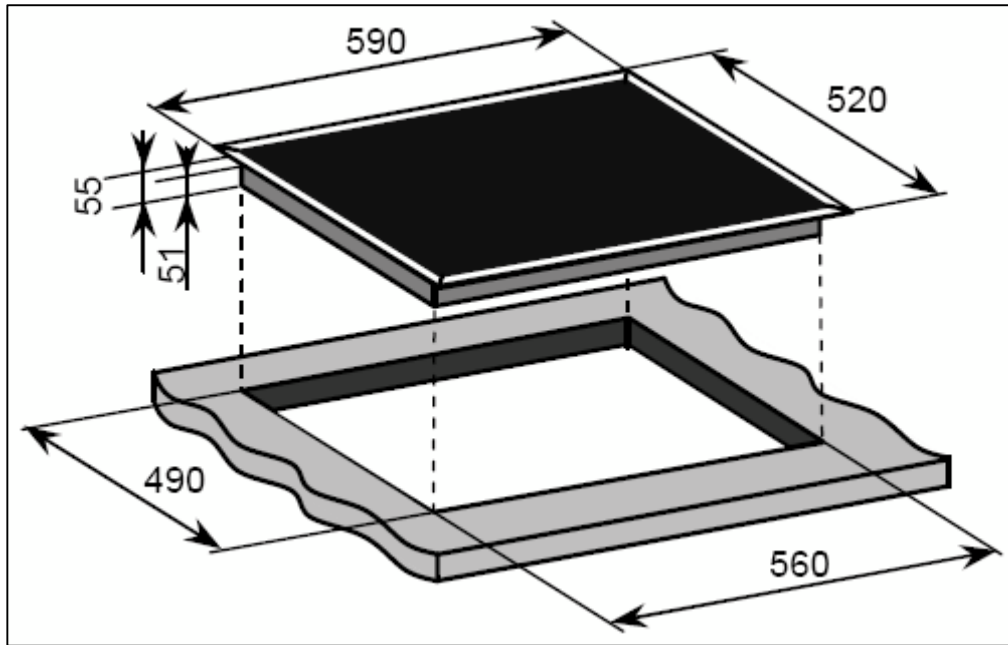

Product dimensions:

Depth:	520 mm
Width:	590 mm
Height:	55 mm

Aperture dimensions:

Depth:	490 mm
Width:	560 mm

Product specifications:

- o 2 x 1.80 kW radiant zones
- o 2 x 1.20 kW radiant zones
- o Side control operation
- o 4 x Individual residual heat indicators
- o Frameless

Standard accessory

- o Ceramic hob scraper

Electrical details

Rated Voltage: 230 Vac 50 Hz

Supply Connection: 30 A (double pole switched fused outlet with 3mm contact gap)

Installed Electric Power: 5500-6600 W

Mains Supply Lead: 3 core x 4 mm² (not supplied)


For future reference please record the following information which can be found on the rating plate and the date of purchase which can be found on your sales invoice. The rating plate of your hob is located on the underneath of the appliance. Therefore it is a good idea to record this information before you install your appliance.

Model Number

Serial Number


Date of Purchase

Ceramic hob surface layout

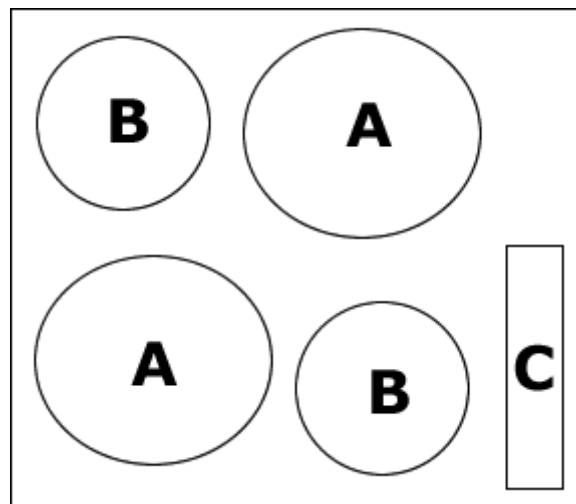

- A = 1.80 kW radiant zones
- B = 1.20 kW radiant zones
- C = Control panel

Control panel

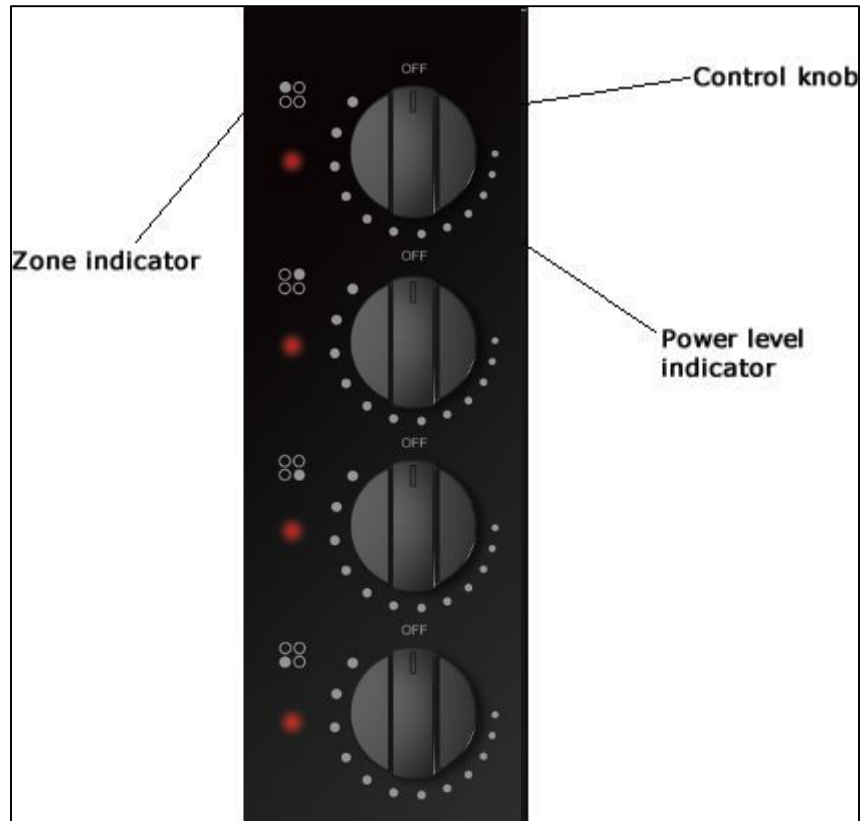

Using the ceramic hob

Before first use




IMPORTANT: You should clean the ceramic hob surface (see “Cleaning and maintenance” section).

- o You should switch on one cooking zone at a time, for 5 minutes at the maximum setting. This will help to eliminate any new smell that exists and evaporate any humidity that has formed on the heating elements during transit.
- o Do not burn off more than one zone at once.
- o **You must** place a saucepan filled half full with cold water on each zone as you burn it off.

Control knobs

- o All operations are performed by means of the 4 control knobs that can be found on the right hand side of the hob top.
- o The control knob should be turned anti-clockwise or clockwise to select a heating level. The dots around the outside of each control knob indicate the power level that you have set the zone to.
- o A marking to the top left of each control knob, indicates which cooking zone that it controls.
- o The control panel and knobs should only be cleaned with mild detergent and a soft cloth to prevent any damage to the serigraphy which will not be covered by warranty.

Switching on a cooking zone and setting a power level

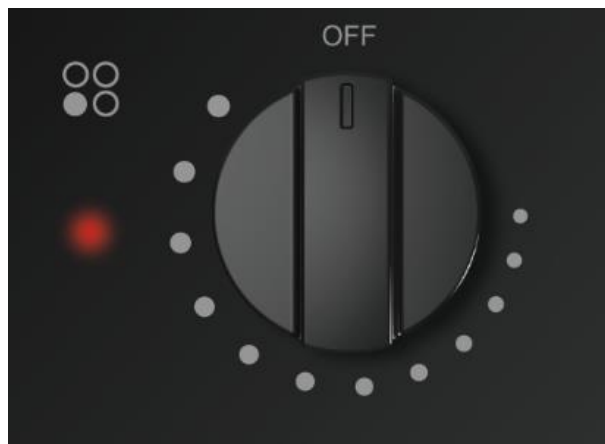

- o Turn the control knob of the cooking zone that you wish to cook on. The control knob can be turned anti-clockwise or clockwise.
- o The smaller dots indicate the coolest cooking zone settings and the larger dots indicate the hottest cooking zone settings.
- o When you have finished cooking, make sure that you turn the control knob to the OFF position.

Residual heat indicators

- o To the left of each control knob, there is a residual heat indicator for the cooking zone that it controls.
- o After turning a cooking zone on, when the temperature of the zone goes above 60°C the corresponding residual heat indicator neon will switch on.
- o After turning a hob zone off, the residual heat indicator neon will stay on. This means that the zone has not been switched off for more than 35 minutes since last use. Therefore it is more likely that the temperature of the zone is still hot enough to cause injury.
- o After 35 minutes, from the zone being switched off, the residual heat indicator neon will turn off.
- o **IMPORTANT:** *The residual heat indicator will disappear if your mains supply is cut.*
- o **IT IS STILL POSSIBLE TO BURN YOURSELF ON A HOB ZONE, EVEN WHEN THE TEMPERATURE OF IT HAS DROPPED BELOW 60°C.**

Hob guidelines

- o The first few times the hob top is used, it may give off an acrid, burning smell. This smell will disappear completely with repeated use.
- o The worktop is fitted with cooking areas of different diameter and power.
- o The positions where the heat will radiate from are clearly marked on the hob top. The saucepans must be positioned exactly on these zones for efficient heating to occur. Pans should have the same diameter as the cooking zone that they are being used on.
- o You should not use saucepans with rough bases, as this can scratch the ceramic surface.
- o Before use, make sure that the bases of the saucepans are clean and dry.
- o When cold, the base of the pans should be slightly concave, as they expand when hot and lie flat on the surface of the hob. This will allow the heat to transfer more easily.

- o The best thickness for the base of the pans is 2 – 3 mm of enameled steel and 4 – 6 mm for stainless steel with sandwich type bases.
- o If these rules are not followed, then there will be a great loss of heat and energy. Heat not absorbed by the saucepan, will spread to the hob, frame and surrounding cabinets.
- o The maximum weight of the pots that can be used on your cooktop is 1.8 kgs.
- o Preferably cover pans with a lid to permit cooking at a lower heat.
- o Always cook vegetables and potatoes, etc. in as little water to reduce cooking times.
- o Food or liquid that has high sugar content may damage the hob top if it comes into contact with the ceramic hob surface. Any spillages should be wiped up immediately, however this may not prevent the hob surface from becoming damaged.
- o **IMPORTANT:** *The ceramic hob surface is tough; however it is not unbreakable and can be damaged-Especially if pointed or hard objects are allowed to fall on it with some force.*
- o **DO NOT USE THE HOB IF THE SURFACE BECOMES BROKEN OR CRACKED. YOU SHOULD CONTACT AN AUTHORISED SERVICE AGENT IMMEDIATELY.**

Cleaning and maintenance



Cleaning operations must only be carried out when the hob is cool.

The appliance should be disconnected from your mains supply before commencing any cleaning process.

Cleaning the ceramic hob top



Any residues that are left on the hob top surface from cleaning agents **will** damage it. You should remove any residues with warm water mixed with a little washing up liquid.



Abrasive cleaners or sharp objects will damage the hob surface; you should clean it using warm water mixed with a little washing up liquid.



You may find it easier to clean some deposits whilst the hob surface is still warm. However you should take care not to burn yourself if cleaning the hob surface when it is still warm.

After each use


- o Wipe the appliance over with a damp cloth.
- o Dry the appliance by rubbing the surface with a clean cloth.

Cleaning table

<i>Type of deposit</i>	<i>Remove Immediately?</i>	<i>Remove when the appliance has cooled down?</i>	<i>What should I use to remove the deposit?</i>
Sugar or food/liquid containing sugar	Yes	No	Ceramic hob scraper
Tin foil or plastic	Yes	No	Ceramic hob scraper
Fat splashes	No	Yes	Ceramic hob cleaner
Metallic discolouration	No	Yes	Ceramic hob cleaner
Water splashes or water rings	No	Yes	Ceramic hob cleaner

Using a ceramic hob scraper

It is possible to purchase a ceramic hob scraper. The following guidelines should also be followed when using the ceramic hob scraper:-

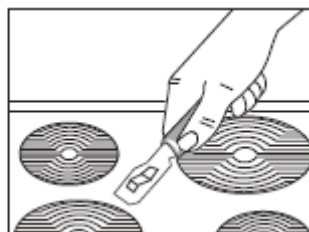

- o The scraper should be placed on the ceramic surface at an angle.
- o Residues should be removed by sliding the blade carefully over the ceramic surface.

- o The ceramic surface should be wiped with a damp cloth that has been placed in warm water mixed with a small amount of washing up liquid.
- o Dry the appliance by rubbing the surface with a clean cloth.

Using a specialist ceramic hob cleaner

- o It is possible to purchase a specialist ceramic hob cleaner/conditioner.
- o You should follow the instructions given by the manufacturer of the specialist ceramic hob cleaner. You should ensure that it is suitable for use on your appliance.

Installation



The installation must be carried out by a suitably qualified person, in accordance with the current version of the following.

- o ***AS/NZS 3000:2007 Wiring Regulations***
- o ***2010 Electricity Safety Regulations***

Positioning



The adjacent furniture must be able to withstand a minimum temperature rise of 85°C above the ambient temperature of the room it is located in, during periods of use.

This appliance is classified as Class 3 and therefore is to be built into a kitchen unit (depending on size) or 600 mm worktop that is at least 30 mm thick. The following minimum clearance distances must be observed:-

- o 760 mm between the hob surface and the underside of any horizontal surface above it, including a rangehood if a rangehood is installed.
- o 50 mm clearance around the front, back and sides of the appliance, measured from the cut out.
- o If the hob is positioned so that the right or left hand side of the appliance will be near to the edge of a kitchen unit. There must be a gap of at least 150 mm between the side of the hob and the vertical surface of any kitchen unit that is made of a combustible material. If the vertical surface is made of a non-combustible material, then 55 mm clearance is sufficient.


However, sufficient space must be allowed for saucepan handles to be turned and for saucepans to be used safely.

Unpacking the appliance


When unpacking the appliance please check that the following items are contained within the packaging:

- 1 Hob
- 1 Installation and instruction manual
- 1 Warranty card
- 4 Fixing brackets
- 4 Fixing screws (ST4*10)

Installing the appliance

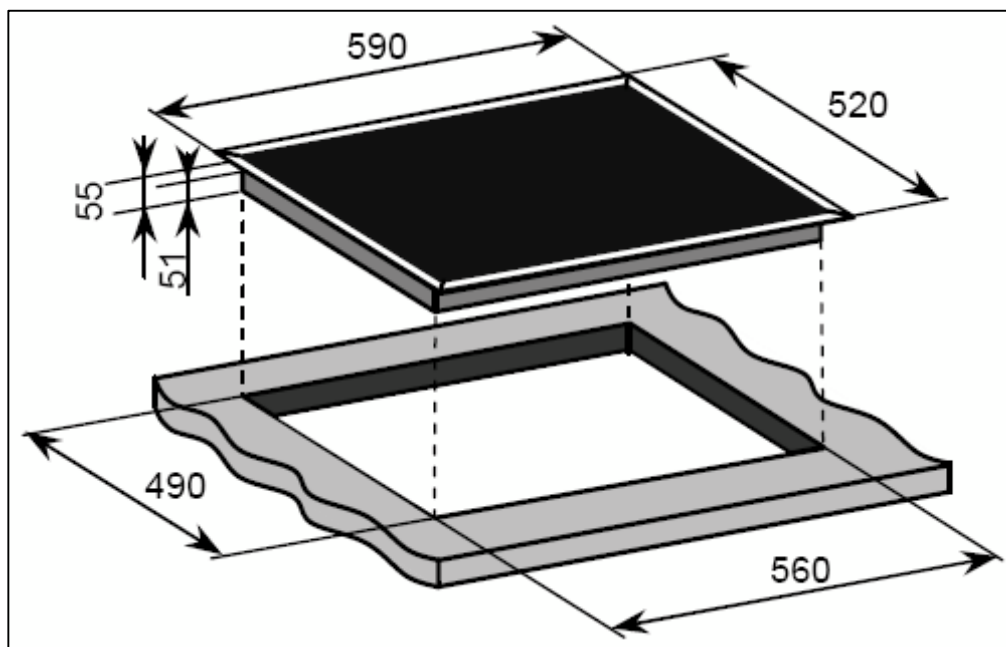


- o Cut a hole in the worktop that corresponds with the drawing shown above.

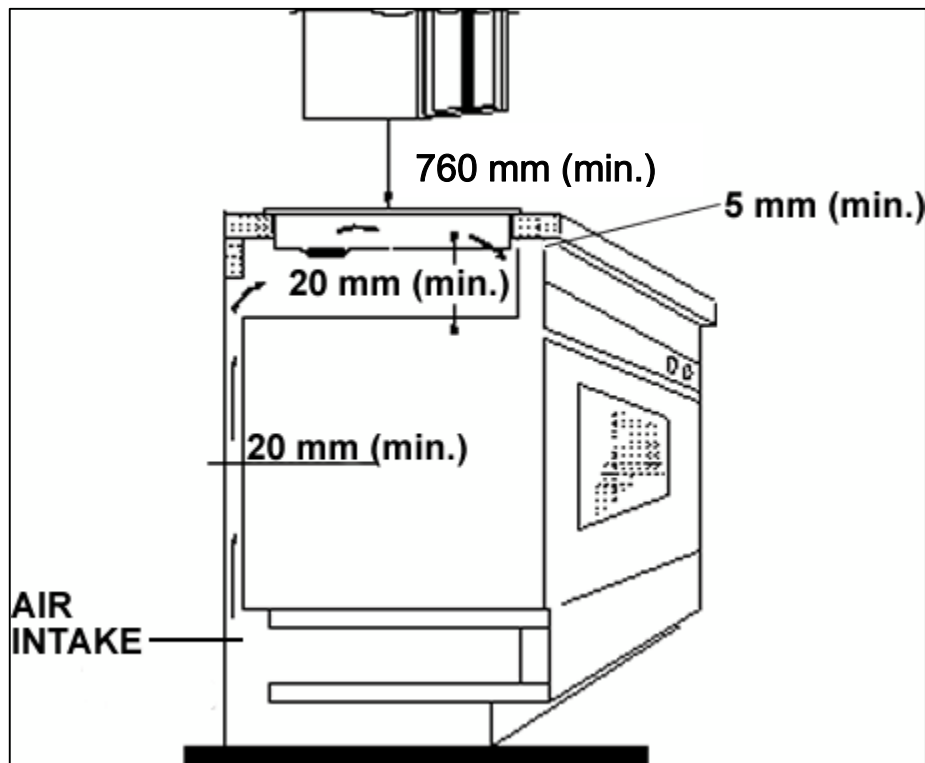

- o **IMPORTANT:** You must observe the ventilation requirements shown in the drawing above. In particular the 20 mm gap underneath the hob and the 5 mm gap underneath the front edge of the worktop.


When you have installed the hob, make sure that

- the power supply cable is not accessible through cupboard doors or drawers.
- there is adequate flow of fresh air from outside the cabinetry to the base of the hob.
- if the hob is installed above a drawer or cupboard space, a thermal protection barrier is installed below the base of the hob.
- the isolating switch is easily accessible by the customer.

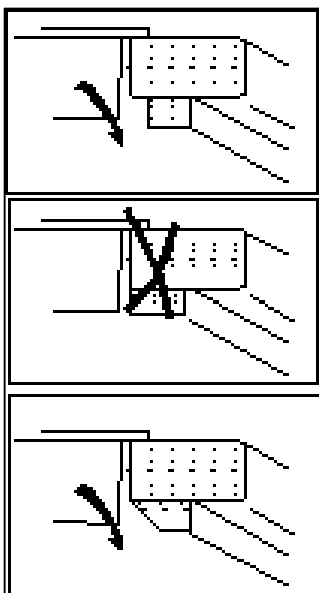

- o **IMPORTANT:** There are ventilation holes around the outside of the hob. **YOU MUST ensure that these holes are not blocked by the work top, when you put the hob into position (see drawing opposite).**
- o Carefully turn the hob upside down and place it on a cushioned mat.

- o **IMPORTANT:** Do not use a silicon sealant to seal the appliance against the aperture. This will make it difficult to remove the hob from the aperture in future, particularly if it needs to be serviced, and may void the warranty.

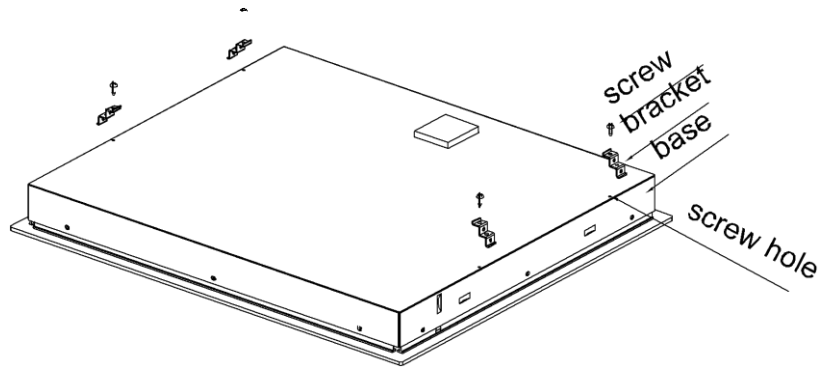

- o Carefully turn the hob back over and then gently lower it into the aperture hole that you have cut out.
- o There are holes on the base or the sides of the hob that you can fix the four brackets to. There are three holes in each one of the brackets.



- o You should place the bracket on the underneath of the hob, in a position that is appropriate for the aperture that you have cut out. Using the screws provided, fix the bracket to the hob. These screws **MUST** be securely tightened.

Electrical connection




This appliance must be installed by a qualified person in accordance with the latest edition of the AS/NZS3000:2007 Regulations and in compliance with the manufacturer's instructions.

Before connecting the appliance, make sure that the supply voltage marked on the rating plate corresponds with your mains supply voltage.


WARNING: THIS APPLIANCE MUST BE EARTHED.

- o This appliance must be wired into a 30 a double pole switched fused spur outlet, having 3 mm contact separation and placed in an easily accessible position adjacent to the appliance. It should not be located above the appliance and no more than 1.25m away from it.
- o The spur outlet must still be accessible even when your hob is located in its operating position.
- o Cable type: H05 RRF 3 core x 4 mm²

Connecting the mains supply cable

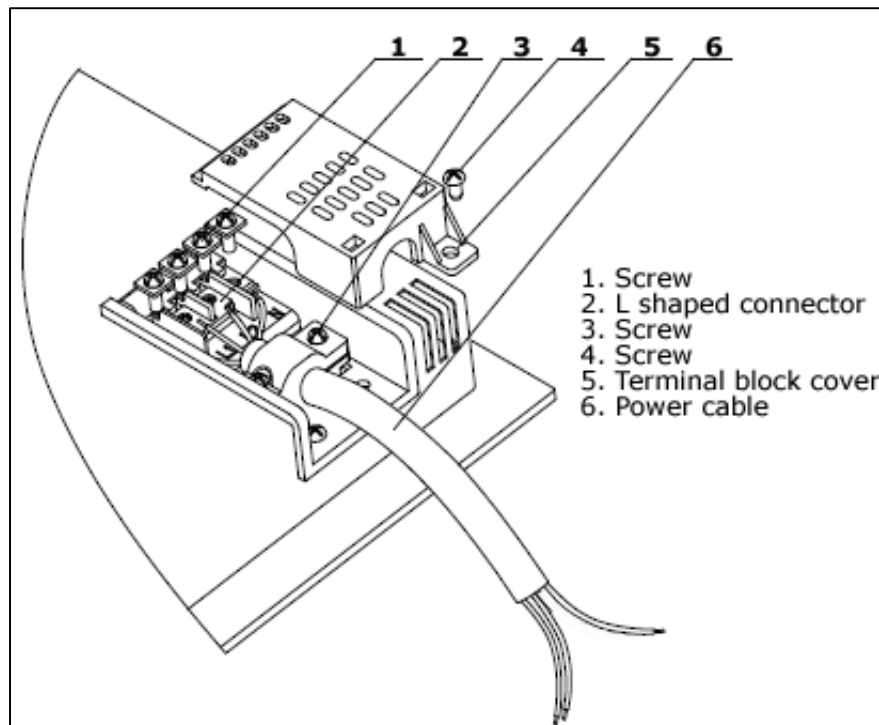

- o The mains terminal block is located on the underside of the hob and the terminals are accessible by removing the terminal block cover by removing the cover screw.

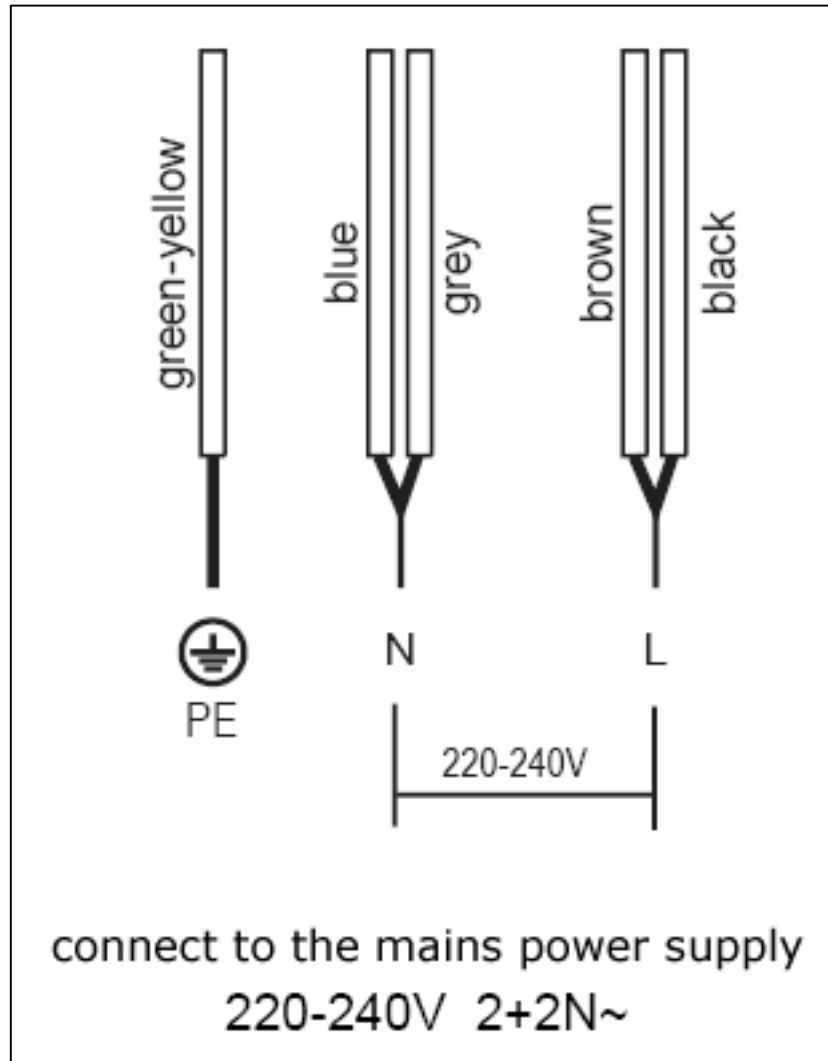


- o The cable connections must be in accordance with the diagram located on the bottom of the hob (see above).
- o You should use a good quality screwdriver to carefully, fully tighten ALL of the terminal screws.
- o ***When the hob is first switched on, if only two of the zones work, you should recheck that the terminal screws are all fully tightened. This should be done before contacting an Authorised Service Agent.***
- o ***IMPORTANT:*** The appliance must NOT be connected to the mains supply by means of a 13A plug and socket.
- o The cable can be looped if necessary, but make sure that is not kinked or trapped when the hob is in position. Care must be taken to avoid the cable being in contact with hot parts of the appliance.

Replacing the mains supply cable

If the mains supply cable is damaged, then it must be replaced by an appropriate replacement.

The mains supply cable should be replaced in accordance with the following instructions:

- o **Switch the appliance off at the socket.**
- o Open the terminal block on the underside of the hob.
- o Unscrew the terminal screws fixing the cable.
- o Replace the cable with one of the same length and in accordance with the specification given on page 19.
- o The “green-yellow” earth wire must be connected to the terminal marked . It must be about 10 mm longer than the live and neutral wires.
- o The “blue” neutral wire must be connected to the terminal marked with letter (N) - the live wire must be connected to the terminal marked with letter (L).

My appliance isn't working correctly

- o **The cooking zones are not functioning or will not switch on.**
 - * Check that the mains electrical supply to the appliance is correct and working. Check the mains fuse.
- o **The residual heat indicator has not come on after I have switched a cooking zone off.**
 - * The cooking zone has only been turned on for a short period of time; therefore it did not go above 60°C.
 - * **IMPORTANT:** *If the cooking zone does appear to be hotter than 60°C and the residual heat indicator has not come on, you should call an Authorised Service Agent.*
- o **A humming sound is heard when a cooking zone is selected.**
 - * This is normal; the sound will disappear when the zone heats up.

The cooking zones have become discoloured.

- * This may be caused by burnt on remnants of food. This will not affect the working of the appliance. However you should make sure that the cleaning instructions are being followed regularly.



IMPORTANT: If your appliance appears not to be operating correctly, then you should disconnect it from your mains supply and then contact an Authorised Service Agent. Go to www.applico.co.nz or phone 0800 M10 HLP / 0800 610 457 to locate a Service Agent nearest to you.

DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF

Please note that if an engineer is asked to attend whilst the product is under guarantee and finds that the problem is not the result of an appliance fault, then you may be liable for the cost of the call out charge.

The appliance must be accessible for the engineer to perform any necessary repair. If your appliance is installed in such a way that an engineer is concerned that damage will be caused to the appliance or your kitchen, then they will not complete a repair.

This includes situations where appliances have been tiled in, sealed in with sealant, have wooden obstructions placed in front of the appliance, like plinths, or any installation other than the one specified by the manufacturer has been completed.

Please refer to the conditions of guarantee that appear on the warranty card that you receive with the appliance.

IMPORTANT: We operate a policy of continuous improvement and reserve the right to adjust and modify our products without prior notification.

Congratulations on your new appliance purchase!
To help care for your investment, be sure to register your appliance online. Registration will help you if you need to arrange service in the future, and serves as a record of your purchase – including critical information like model number and serial number – that you can refer to at any time. Simply visit the below website, or ask your retailer for help:

www.classique.co.nz/register

WARRANTY:

These products are covered by a warranty for a period of 24 months from the date of purchase, subject to the following conditions*. The warranty covers rectification free of charge of any fault arising from defective materials or components, or faulty workmanship or assembly.

* The conditions above mentioned are:

1. That the purchaser carefully follows all instructions packed with the product;
2. That the purchaser and/or installer carefully follows the installation instructions provided and complies with electrical wiring regulations, gas and/or plumbing codes;
3. That the purchaser carefully follows instructions provided in the owner's handbook relating to the proper use and care of the product and does not use the product for any purpose other than the domestic use for which it has been designed;
4. Commercial use of the product for professional or industrial purposes will void this warranty.;
5. That the product was purchased and installed in New Zealand;
6. That this warranty does not extend to:
 - a) optional glass lids for hobs apart from claims which relate to mechanical or physical damage thereof at the date of purchase;
 - b) 'consumable' parts such as light bulbs or filters;
 - c) damage to ceramic glass caused by liquid or solid spill-overs, lack of maintenance, or impact;
 - d) damage to surface coatings caused by cleaning or maintenance using products not recommended by the owner's handbook;
 - e) defects caused by normal wear and tear, accident, negligence, alteration, misuse or incorrect installations;

- f) a product dismantled, repaired or serviced by any serviceman other than an authorised service agent;
- g) a product not in possession of the original purchaser;
- h) damage caused by power outages or surges
- i) damage caused by pests (eg. rats, cockroaches etc.)

7. That if the product is a freestanding microwave oven or small appliance it must be returned to the dealer/retailer for servicing. These products, unless stated otherwise, have a 12 month warranty from original date of purchase with 24 months on the microwave magnetron; Waste disposers have a 12 month warranty.
8. The provision of service under this warranty is limited by a 25km boundary from the retailer where the product was purchased except for microwaves. Such travelling outside of these limits will incur commercial cost to be paid by you, regulated by the number of kilometres travelled beyond the 25km limit (50km return trip). Microwaves are to be delivered to the nearest authorised service agent by the customer.

Please refer to your user manual for any further conditions that may apply to your specific model.

Nothing herein contained shall be construed in any way as excluding or limiting your rights under the Consumer Guarantees Acts 1993.

For Service please visit www.classique.co.nz/service or contact the dealer/retailer from whom you purchased the product from or call the 0800 number listed below. If you are unable to establish the date of purchase, or the fault is not covered by this warranty, or if the product is found to be in working order, you will be required to bear all service call charges.

Registration of this warranty constitutes acceptance of the terms and conditions of this warranty.

Should you require any assistance, please call Customer Services on 0800 610 457.

Distributed by Applco Ltd.
www.classique.co.nz

September 2015

After registering your appliance online, we recommend you fill out the below information for your reference and keep this warranty card in a safe place.

PRODUCT:
RETAILER:
DATE OF PURCHASE:
INVOICE NO:
MODEL NO:

SERIAL NO*:

REGISTRATION WEBSITE DETAILS FOR
www.classique.co.nz/register

WEBSITE USERNAME:

WEBSITE PASSWORD:

*Please consult your user manual for guidance on finding the serial number.

THIS WARRANTY IS VALID IN NEW ZEALAND ONLY.

Classique

From one generation to the next Founded in 1974

Imported by Applico Ltd.
Private Bag 92900
Onehunga, Auckland 1061,
New Zealand

Website
www.classique.co.nz

Phone
0800 M10 HLP
or
0800 610 457